



Aspirating Systems

Duct Detection - Design & Application Guide



System Sensor Application Design Guide

Duct Application Notes

Preface

System Sensor has designed an air sampling smoke detection system specifically for use in ventilation ducts. The information contained in this document will assist you when designing System Sensor systems for this type of application.

Note: This system is not suitable for use in flexible ducts.

Related Products

Two System Sensor LaserCOMPACT detectors have been specially adapted for installation in ducts. Their model numbers are as follows:

- LaserCOMPACT™ VLC-500D
- LaserCOMPACT™ VLC-505D

Duct Application Notes

System Sensor System Design

Sampling Pipe Configuration In Small Ducts

Small ducts are defined as those of width less than 1 m (3.28 ft). The figure below (Figure 1) shows a side view of a duct section with the insertion positions for the System Sensor smoke detector inlet and exhaust pipes.

The detector inlet pipe should be installed in the middle of the duct at height H , where H is half of the duct diameter. The detector exhaust pipe should be inserted approximately 0.5 m (1.64 ft) downstream of the inlet pipe, at a quarter of the height of the duct.

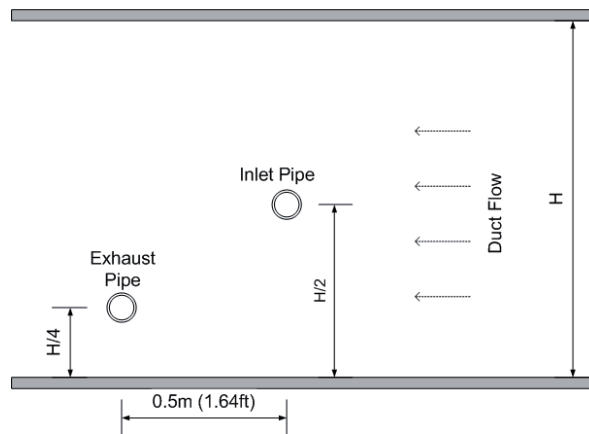


Figure 1 – Side view of the inlet and exhaust pipe positions for a small ventilation duct.

A top view of the above installation is shown below (Figure 2). The number of inlet pipe sampling holes, their required size and spacing are listed in Table 1. Both sampling pipe and exhaust pipe holes have the same orientation with respect to the direction of the duct airflow.

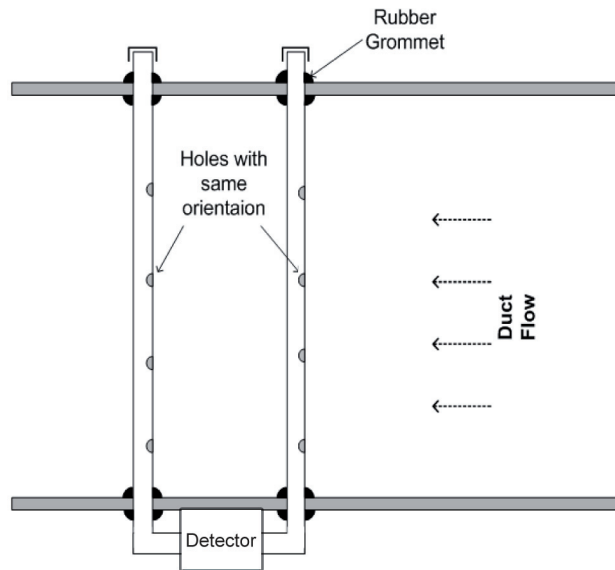


Figure 2 – Top view of the inlet and exhaust pipe positions, including sampling hole location, for a small duct.

Duct Application Notes

The sampling hole sizes, for the inlet pipe, are shown in the Table below. The exhaust pipe must have $4 \times \text{Ø}10 \text{ mm}$ ($21/32$ inch) holes, regardless of the width of the duct. These holes should be located in the middle of the duct width at least 50 mm (2 inches) from the side walls.

Table 1 – Sampling hole requirements for a System Sensor detector with 5 m (16.4 ft) inlet pipe and 2 m (6.56 ft) exhaust pipe in small ducts.

Duct width (m) {ft}	Number of Holes	Hole Ø (mm) {in}	Nominal Pipe Flow Rate (L/min) {cfm}
0.3 {1.0}	2	6 { $15/64$ }	39.0 {1.4}
0.5 {1.7}	3	5 { $13/64$ }	40.7 {1.4}
0.7 {2.3}	4	4 { $5/32$ }	35.6 {1.26}
0.9 {3.0}	5	4 { $5/32$ }	42.8 {1.51}

Note: Nominal sampling hole spacing is 0.2 m (0.66 ft).

Sampling Pipe Configuration In Large Ducts

Large ducts are defined as those with widths of 1 to 2 m (3.28 To 6.56 ft). For these ventilation ducts, it is recommended that the inlet pipe of the smoke detector be in two branches. The figure below (Figure 3) shows a side view of a duct section with the relative insertion points for the inlet and exhaust pipes. The two inlet branches are located at a quarter of the height (H) of the duct with the exhaust pipe inserted mid-height approximately 0.5 m (1.64 ft) downstream of the inlet pipes.

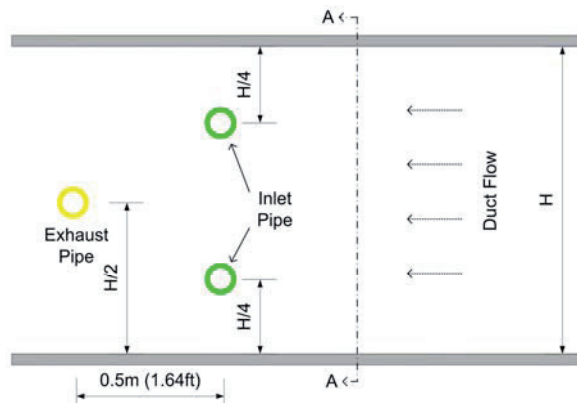


Figure 3 – Side view of the inlet and exhaust pipe positions for a large duct.

The following figure (Figure 4) shows a cross-section view of the same duct with the positions of the inlet branches and exhaust pipe indicated. The number of inlet pipe sampling holes, recommended hole size and spacing are presented in Table 2.

Duct Application Notes

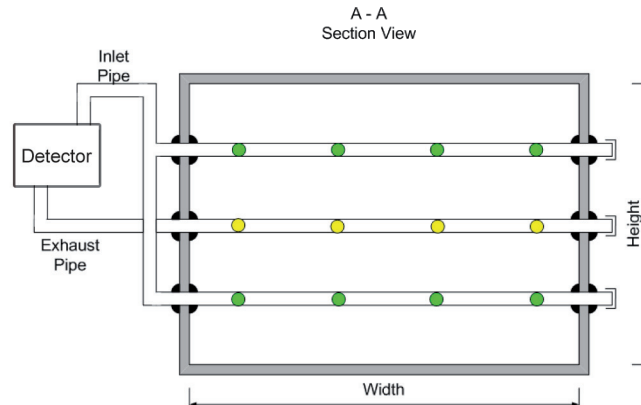


Figure 4 – Cross-section view of the inlet pipe sampling hole setup and exhaust pipe in large ducts.

Table 2 – Sampling hole requirements for a System Sensor detector with 5 m (16.4 ft) inlet pipes and 2 m (6.56 ft) exhaust pipe in a large duct.

Duct Width (m) {ft}	Number of Holes	Hole Ø (mm) {in}	Nominal Pipe Flow Rate (L/min) {cfm}
1.0 {3.3}	6	3.5 { $\frac{9}{64}$ }	42.2 {1.49}
1.5 {5.0}	8	3.0 { $\frac{1}{8}$ }	41.4 {1.46}
2.0 {6.5}	10	3.0 { $\frac{1}{8}$ }	50.0 {1.76}

Note: Nominal sampling hole spacing is 0.4 m (1.3 ft).

The exhaust pipe must have 4 × Ø10 mm (21/32 inch) sampling holes, regardless of the width of the duct. These holes should be located in the middle of the duct width at least 50 mm (2 inches) from the side walls.

Note: calculations, performed with the ASPIRE2 pipe design software tool and shown in Tables 1 and 2, apply to a 5 m (16.4 ft) inlet pipe and a 2 m (6.56 ft) exhaust pipe. These calculations are suitable for an inlet pipe length of 1 to 10 m (3.28 to 32.8 ft) and an exhaust pipe length of < 2 m (6.56 ft), provided that corresponding pipe flow rate adjustments are made. Always refer to local codes and standards for hole size and spacing requirements.

Key Design Considerations

The following should be considered when designing a System Sensor system inside a duct:

- The inlet pipe of the System Sensor smoke detector must be inserted at a distance of **six to ten** duct widths or diameters from any flow disturbance caused by sharp bends, plenums, nozzles, branch connections etc. Hence this system is not suitable for flexible ducts.
- All inlet and exhaust pipes must be sealed at their far end with an end-cap.
- The holes on the inlet and exhaust pipes should be facing the airflow as shown in the above figures. Holes with the same orientation eliminate unwanted flow faults associated with cyclical operation, maintenance or power failure of the duct system. However, in some industrial applications, where the quality of air inside the duct is poor, it is recommended that all holes on the inlet and exhaust pipes face downstream, that is, 180° to the incoming airflow).

Duct Application Notes

- The pipes should always be held in position at the duct walls with fittings such as rubber grommets. Silicon is recommended, to ensure an airtight seal.
- Make sure that sampling holes are at least 50 mm (2 inches) away from the duct walls.
- Regardless of duct width, the exhaust pipe must have $4 \times \text{Ø}10$ mm (21/32 inches) holes.
- Never simultaneously sample from multiple ducts. Use a different smoke detector for each duct.
- Never simultaneously sample from inside the duct and from ambient environments with the same detector.

System Sensor System

Environmental Conditions

You will need equipment to measure the following environmental conditions when installing a System Sensor system in a duct:

- Temperature
- Humidity
- Static Pressure – the pressure generated by the fan to deliver a specific flow-rate in the duct. This pressure is a function of the flow-rate and impedance of the duct system.
- Air Pressure

Condensation may occur when the dew point temperature of the air in the ventilation duct is at or above the ambient temperature of the area where the smoke detector is installed. This usually occurs when the temperature of the humid air in the duct is higher than the ambient temperature of the air outside the duct, where the detector is to be installed, and the temperature of the air inside the sampling pipes of the detector.

You should measure the temperature and humidity both inside the duct and in the area where the detector will be installed. If the results indicate that condensation may be a problem, refer to the 'Duct Sampling and Condensation' section of the Pipe Network Installation Manual for advice on how to modify the design. The Pipe Network Installation Manual (Document Number 10255) forms part of the System Sensor System Design Manual.

One solution for combating condensation is to mount the detector on its side (Figure 5). This places the laser chamber higher than the aspirator so that any water in the inlet pipe does not reach the detector chamber

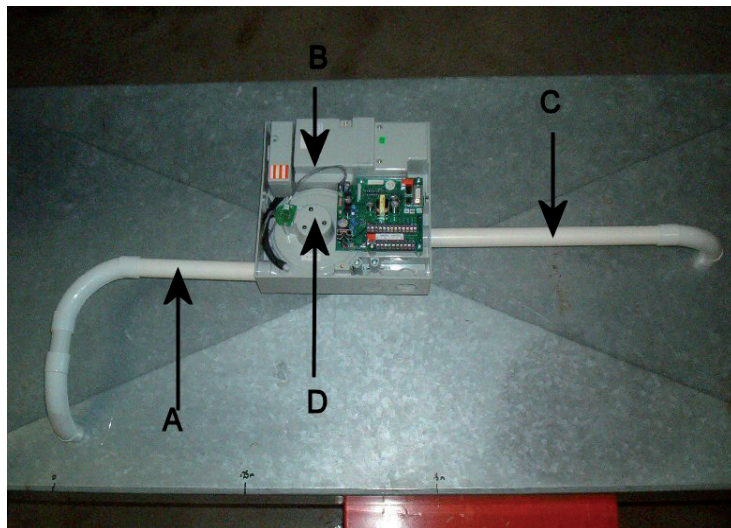


Figure 5 – System Sensor detector sideways mounting solution, to combat condensation.

Duct Application Notes

The sampling pipe should be removed from the detector regularly for inspection, especially during winter, to determine whether any condensation is forming inside the pipes.

Smoke tests should be conducted regularly during the first two months following installation. If the smoke tests fail, condensation may have affected the air filter in the detector. Replace the air filter and re-test. The condensation problem will need to be addressed by following the methods described above.

If you have any doubts about the installation, seek support from your local System Sensor office or System Sensor distributor.

Key Installation Considerations

You must consider the following when installing a System Sensor system in a duct:

- In air-return ducts, the smoke detector must be installed where the static pressure is above -500 Pa and the air velocity in the duct is below 20 m/s or, converted to volumetric flow rate (m^3/hr) = velocity \times duct area.
- Always vent the exhaust pipe back into the ventilation duct, even when the duct pressure is sometimes < 20 Pa, because the duct system operation may change in the future.
- For air-return (negative pressure) ducts, the smoke detector must be installed as follows:
 - Upstream and away from any fans.
 - As close as possible to air vents (though still $6-10$ duct widths away) as this will reduce large negative pressures.
 - Upstream of humidifiers, heating coils and filters.
 - Upstream of fresh air intakes.
- For a smoke detector mounted on the duct, ensure there are no tangible vibrations when the duct system is in full operation. If there are vibrations, insert visco-elastic foam between the smoke detector's mounting bracket and the external surface of the duct.

System Sensor System Commissioning

Hole Orientation Adjustment

The differential pressure across the inlet and exhaust pipes must be kept within ± 20 Pa To ensure the normal operation of the smoke detector. Differential pressure is created by the orientation of the holes on both pipes in relation to the duct flow. There are three methods for adjusting hole orientation. Your choice of method will depend on what equipment is available to you.

1. Method 1 takes about 5 to 15 minutes, not including air flow normalization. No special equipment required.

Step	Action
1	Ensure that the ventilation duct system is operating and airflow is present in the duct.
2	Drill holes in the inlet and exhaust smoke detector pipes as required.
3	Connect the inlet and exhaust pipes to the detector while the pipes are outside the duct.
4	Normalize the airflow to the smoke detector and then record the %Flow.
5	Insert the inlet and exhaust smoke detector pipes in the duct with the holes facing the airflow and record %Flow at the smoke detector.
6	Slightly rotate the pipes so that the %Flow is within 5% of the original reading.
7	Mark the position of the pipes' orientation on the duct and pipes. This will make re-positioning the pipes easy after maintenance checks in the future.
8	Secure the pipe installation.

Duct Application Notes

2. Method 2 requires no connection to the smoke detector. Inlet and exhaust pipes are installed inside the duct. A manometer, for instance, Model 8702 DP-CALC Micromanometers from www.tsi.com will be required.

Step	Action
1	Connect the ends of the inlet and exhaust smoke detector pipes to a pressure manometer ¹ as shown (Figure 6), ensuring that all connections are airtight.
2	Face the holes of both pipes to the airflow and slightly rotate the pipes so that the pressure reading is within ± 20 Pa.
3	Mark the position of the pipes' orientation on the duct and pipes. This will make re-positioning the pipes easy after maintenance checks in the future.
4	Connect the detector after securing the pipe network.

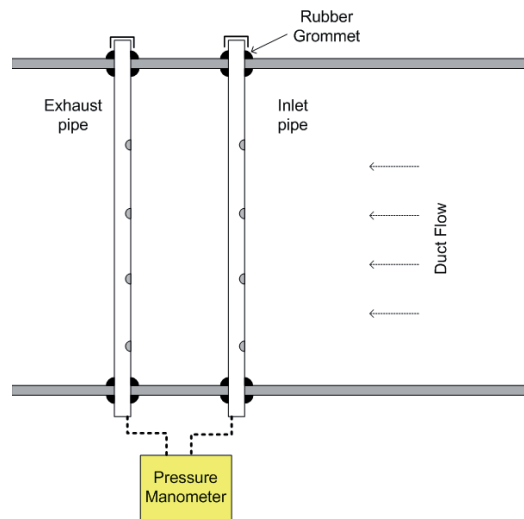


Figure 6 – Manometer set-up for hole orientation adjustment.

3. Method 3 is the same as Method 2, except that it does not require the manometer but uses a clear, flexible U-tube.

Step	Action
1	Instead of a manometer, connect the ends of inlet and exhaust pipes to a clear U-shaped flexible tube containing water as shown (Figure 7), ensuring all connections are airtight.
2	Face the holes on both the inlet and exhaust pipes to the airflow. Slightly rotate the pipes so that the water level on both sides of the flexible tube is the same.
3	Mark the position of the pipes' orientation on the duct and pipes. This will make re-positioning the pipes easy after maintenance checks in the future.
4	Connect the detector after securing the pipe network.

Duct Application Notes

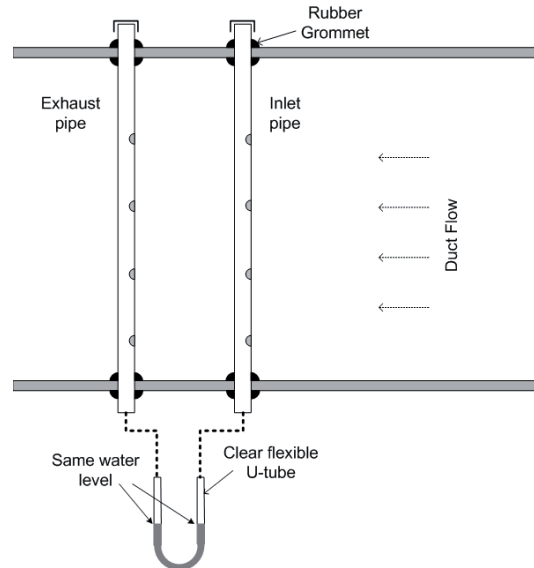


Figure 7 – Flexible U-tube set-up for hole orientation adjustment.

System Performance Verification

Verify system performance, with the Air Handling Unit (AHU) in its normal operating mode, by following the steps below.

Step	Action
1	Connect to the smoke detector using the System Sensor System Configurator (VSC) software or a hand-held programmer. Record the initial background reading from the detector.
2	Conduct two smoke tests inside the duct using a small amount of smoke, from a smoke cartridge (i.e. approximately 3 g), with known characteristics.
3	Record the peak smoke reading and the time taken to reach the peak.
4	To test air leakage into the smoke detector, remove the front cover of the detector. Cover the electronics during this test with a sheet of paper.
5	Introduce smoke inside the detector's interior housing using a smoke can.
6	Place the smoke can's nozzle 0.5 m (1.5 ft) away from the detector and spray for no more than 1 second. Note the peak smoke reading from the detector.
7	Repeat the smoke test twice more, after the background returns to ambient, noting the peak smoke reading each time.
8	If all of the peak smoke readings were $< \text{initial background reading} + 0.05\%$, proceed to Step 10. If any of the peak smoke readings were $> \text{initial background reading} + 0.05\%$, there is possibly leakage in the system that must be corrected. Proceed to Step 9.
9	Check all pipe connections and repeat Steps 5-8. If necessary, contact your local distributor or System Sensor office.
10	Complete any additional tests required to verify compliance with local codes and standards.

Note: This document intended only as a guide to the application of fire detection systems.

Reference must be made to relevant national and local standards.

Duct Application Notes

System Maintenance

Local Codes & Standards

Important Note: The maintenance requirements of all local codes and standards must be adhered to.

First Year Requirements

Repeat the procedure for Performance Verification, as described above in SYSTEM COMMISSIONING, at least once every six months. Test more often during any extreme weather conditions and ensure that one test is conducted during winter. Compare readings with previous records and investigate any discrepancies.

On-Board Filter Replacement

The smoke detector will indicate when its filter needs to be replaced. Replace the filter and repeat the procedure for Performance Verification as described above in System Commissioning.

Site Visit Requirements

During each site visit, at a frequency specified by local codes and standards, the following procedure must be carried out.

Step	Action
1	Check flow readings at the smoke detector(s). Differences in flow readings from those of previous site visits require further investigation such as inspection of the pipes' integrity for fatigue and creep, or for hole blockage.
2	Check for condensation in the pipes and address the problem as described in System Installation under Environment.
3	Check the original hole orientation marks to ensure that they have not been moved since the last inspection. If the hole orientation has changed, refer to Hole Orientation Adjustment and readjust.

In addition to the above, the following procedure needs to be carried out during each site visit for pipe maintenance.

Step	Action
1	Disconnect inlet and exhaust pipes from the smoke detector.
2	Remove the end caps from the inlet and exhaust pipes. Back-flush with compressed air.
3	Ensure all pipes are returned to their original configuration.
4	Check overall system performance.

Duct Application Notes

Disclaimer on the Provision of General System Design Recommendations

Any recommendation on system design provided by System Sensor is an indication only of what is considered to be the most suitable solution to meet the needs of the common application environments described.

In some cases the recommendations on system design provided may not suit the unique set of conditions experienced in a particular application environment. System Sensor has made no inquiry nor undertaken any due diligence that any of the recommendations supplied will meet any particular application. System Sensor makes no warranty as to the suitability or performance of any recommendation on system design. System Sensor has not assessed the recommendation on system design for compliance with any codes or standards that may apply nor have any tests been conducted to assess the appropriateness of any recommendations on system design. Any person or organization accessing or using a recommendation on system design should, at its own cost and expense, procure that the recommendation on system design complies in all respects with the provision of all legislation, acts of government, regulations, rules and by-laws for the time being in force and all orders or directions which may be made or given by any statutory or any other competent authority in respect of or affecting the recommendation on system design in any jurisdiction in which it may be implemented.

System Sensor products must only be installed, configured and used strictly in accordance with the General Terms and Conditions, User Manual and product documents available from System Sensor. System Sensor accepts no liability for the performance of the recommendation on system design or for any products utilized in the implementation of the recommendation on system design, aside from the General Terms and Conditions, User Manual and product documents.

No statement of fact, drawing or representation made by System Sensor either in this document or orally in relation to this recommendation on system design is to be construed as a representation, undertaking or warranty.

To the extent permitted by law, System Sensor excludes liability for all indirect and consequential damages however arising. For the purposes of this clause, 'consequential damage' shall include, but not be limited to, loss of profit or goodwill or similar financial loss or any payment made or due to any third party.

Recommendations on system design are provided exclusively to assist in design of systems using System Sensor products. No portion of this recommendation on system design can be reproduced without the prior approval in writing of System Sensor. Copyright and any associated intellectual property in any such recommendations on system design or documentation remains the property of System Sensor.

System Sensor Europe (Technical Services)

Charles Avenue
Burgess Hill
RH15 9TQ
United Kingdom

Tel: +44 (0)1444 238820
Fax: +44 (0)1444 248123
Email: sse.technical@systemsensor.com

European Manufacturing Centre

System Sensor
Via Caboto 19/3
34147 Trieste
Italy

Tel: +39 040 949 0111
Fax: +39 040 382 137
Email: sse.sales@systemsensor.com

www.systemsensoreurope.com

